INTRODUCTION 2

1. WARNINGS AND WARRANTY CONDITIONS 3

1.1. SAFETY WARNINGS 3
1.2. GUARANTEE CONDITIONS 3
1.2.1. Exclusions 3

2. GAUGUIN CLADDING WITH FIREPLACE STOVES FPURO95 5

3. ASSEMBLY OF GAUGUIN CLADDING 6

3.1. COMPONENTS OF GAUGUIN CLADDING FORMA PURO95 6
3.2. PHASE 1 - POSITIONING OF FIREPLACE STOVE FORMA PURO 95 7
3.3. PHASE 2 – ASSEMBLY OF LOWER PROFILE AND SIDESRH/LH 8
3.4. PHASE 3 – INSTALLATION OF UPPER PROFILE 10
3.5. PHASE 3 – WALL FOR RECESSED INSTALLATION 11
3.6. PHASE 4– ASSEMBLY OF SLATE FRAME WITH STAINLESS STEEL FIRE BOX 12
3.7. PHASE 5 – FINAL ASSEMBLY OF SLATE FRAME AND STAINLESS STEEL FIRE BED 14
3.8. TECHNICAL TERMS GLOSSARY OF THE PICTURES 16

Technical service – all rights reserved by mcz spa
Reproduction prohibited

INTRODUCTION

Dear Customer,

thank you for choosing a MCZ product and in particular the Gauguin cladding Forma Puro95.

We are sure that, by using it, you will appreciate the quality of an accurately designed and tested product. Our goal is to combine technology with easy of use and, above all, safety.

For optimal functioning of the Gauguin cladding and to fully enjoy the heat and sense of well being that will spread throughout your home, we suggest that you carefully read this use and maintenance manual before using the product for the first time; please contact your dealer should you require assistance in resolving any doubts or problems.

Congratulations on your choice and remember, the fireplace stove **MUST NEVER** be used by children who should always be kept at a safe distance!

Revisions to the publication

In order to improve the product, the Manufacturer reserves the right to modify and update this publication without prior notice.

Reproduction, even partial, of this manual without the Manufacturer's authorisation is prohibited.

Manual preservation.

- Please take care of this manual and keep it in a place that can be quickly and easily reached.
- If this manual should be lost or destroyed, or if it is in poor condition, request a copy from your dealer or directly from the manufacturer, providing product identification data.

Technical service – all rights reserved by mcz spa
Reproduction prohibited

1. WARNINGS AND WARRANTY CONDITIONS

1.1. SAFETY WARNINGS

- Check the conditions of the surface that will support the weight of the stove. If it is made of flammable material (such as wood, carpet, or plastic) provide suitable insulation.
- The user is fully liable for improper product use, releasing MCZ from any civil or penal liabilities.
- Any tampering with the fireplace stove, or use of non-original spare parts, may be hazardous to the user and releases MCZ from any civil or penal liability.
- Incorrect installation or poor maintenance (not compliant with the provisions of this manual) may cause damages to persons, animals or property. MCZ is not civilly or criminally liable in these cases.

1.2. GUARANTEE CONDITIONS

MCZ guarantees the product, **with the exception for the elements subject to normal wear** listed below, for two years from the date of purchase that is proven by a document that indicates the dealer's name and date of sale, if the completed warranty certificate was returned within 8 days and if the product was installed and inspected by a specialised installation technician and according to the detailed instructions indicated in the instruction manual supplied with the product.

The warranty includes the free replacement or repair of **parts recognised as factory defective.**

1.2.1. Exclusions

The guarantee does not cover any part that may be defective due to negligence or careless use, incorrect maintenance, installation non compliant with that specified by MCZ.

MCZ refuses to accept any responsibility for any damage which may be caused, directly or indirectly, by persons, animals or things as a result of the failure to observe all the provisions set forth in the instruction booklet, especially those concerning warnings on the subject of installation, use and maintenance of the appliance.

In the event of product inefficiency, please contact your dealer and/or area importer.

Damages caused by transport and handling are not covered by the guarantee.

Exclusively refer to the supplied manual for product installation and use.

The guarantee will be invalidated in the event of damage caused by tampering with the appliance, atmospheric agents, natural disasters,

Technical service – all rights reserved by mcz spa
Reproduction prohibited

electrical discharges, fire and lack of, or incorrect, maintenance in terms of the manufacturer's instructions.

REQUEST FOR SERVICE

Requests for service must be addressed to the dealer who shall forward the request to the MCZ technical assistance service.

MCZ is not liable in the event the product and any other accessory is improperly used or modified without authorisation.

Only original MCZ spare parts must be used for all replacements.

Technical service – all rights reserved by mcz spa
Reproduction prohibited

2. GAUGUIN CLADDING WITH FIREPLACE STOVES FPURO95

The Gauguin model is *a* recessed cladding, i.e. the fireplace stove is recessed into the wall. Therefore it is necessary to build a counter-wall that protrudes from the perimeter wall. The depth of the wall to be constructed is at your discretion provided you comply with all safety distances for the fireplace stove. For this purpose please refer to the *Manual for Installation and Use* of Forma Puro FP95.

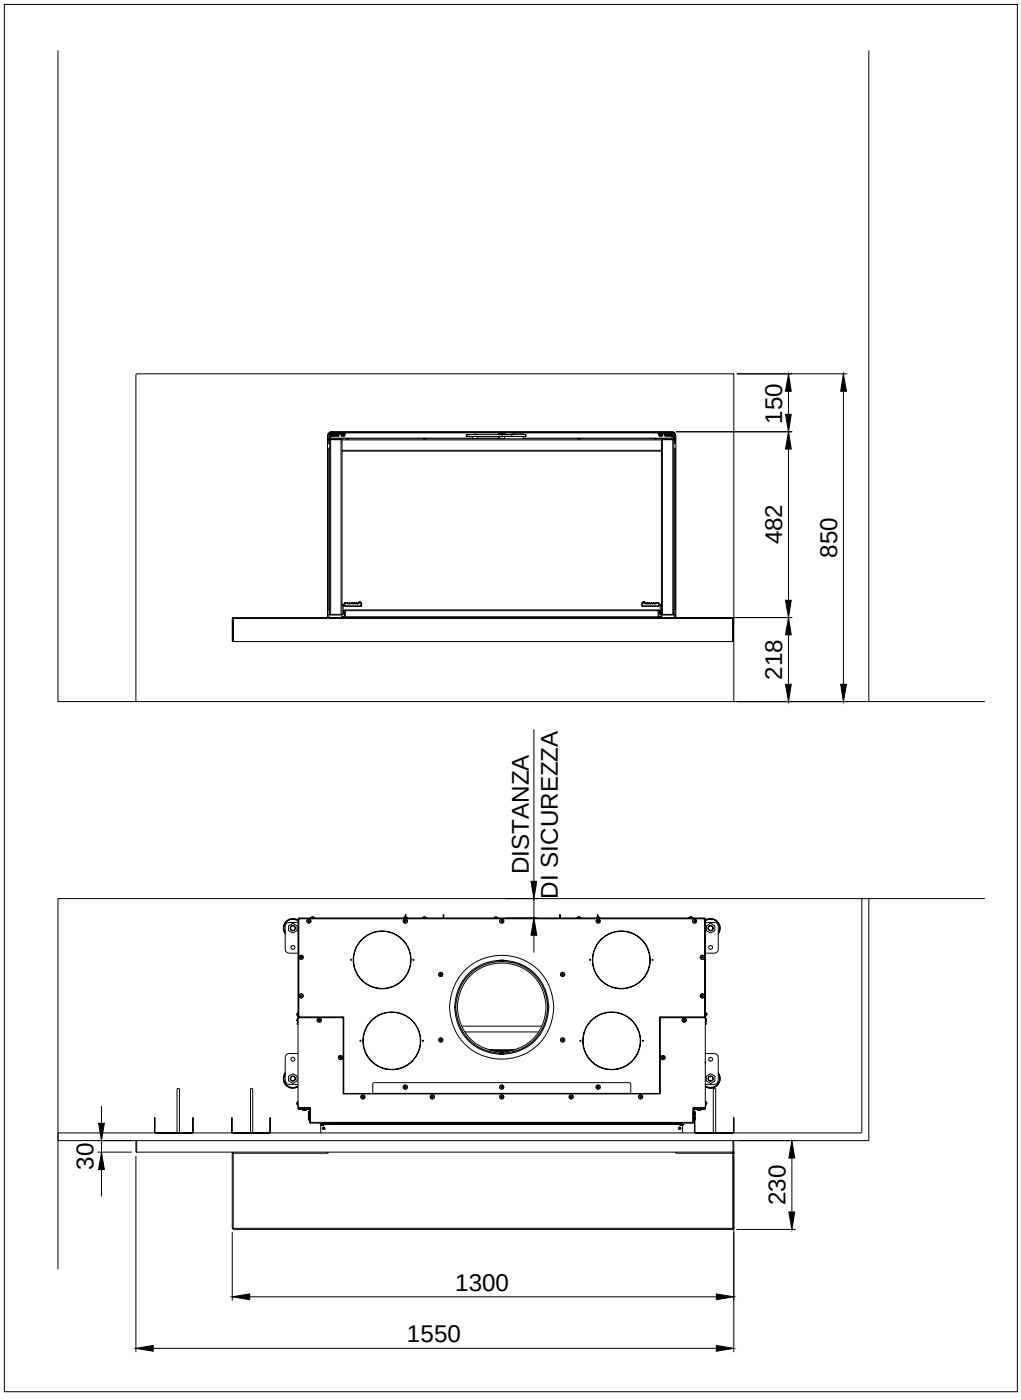

Technical service – all rights reserved by mcz spa
Reproduction prohibited

3. ASSEMBLY OF GAUGUIN CLADDING

3.1. COMPONENTS OF GAUGUIN CLADDING FORMA PURO95

	COMPONENTE	N.
1	PROFILO INFERIORE	1
2	SPALLA SX	1
3	SPALLA DX	1
4	PROFILO SUPERIORE	1
5	CORNICE ARDESIA	1
6	PIANO FUOCO	1
7	STAFFA PIANO FUOCO	5

	VITERIA IN DOTAZIONE	N.
	VITE PH-AB 3,9X9,5	8
	VITE AUTOPERF.4.2X16	2
	VITE M5X50 C/FLANGIA	5
	DADO FLANGIATO FD M5	5

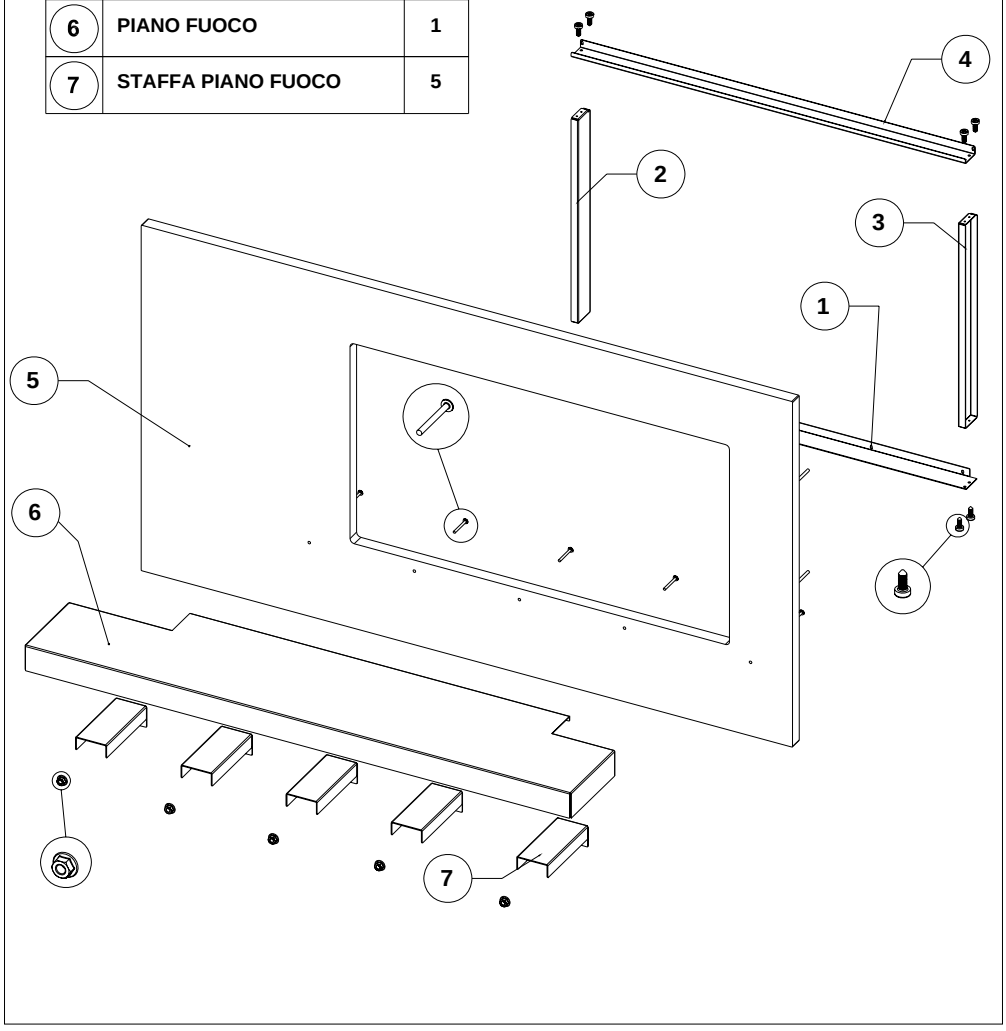

Technical service – all rights reserved by mcz spa
Reproduction prohibited

3.2. PHASE 1 - POSITIONING OF FIREPLACE STOVE FORMA PURO 95

Place the Forma Puro95 in the desired position and at a safe distance from the rear wall. Raise the fireplace stove so that the height of the edge-cover profile with respect to the floor is 220 mm. A second adjustment of the unit, if necessary, is made during assembly of the cladding.

N.B. There are various ways of raising the Forma Puro95, at your discretion. However, any solution must ensure safety and stability of the unit.

Install the unit Forma Puro 95 in accordance with the instructions in the respective *Manual for Installation and Use* and run a quick test for proper operation. If the test is successful, you can install the Gauguin cladding.

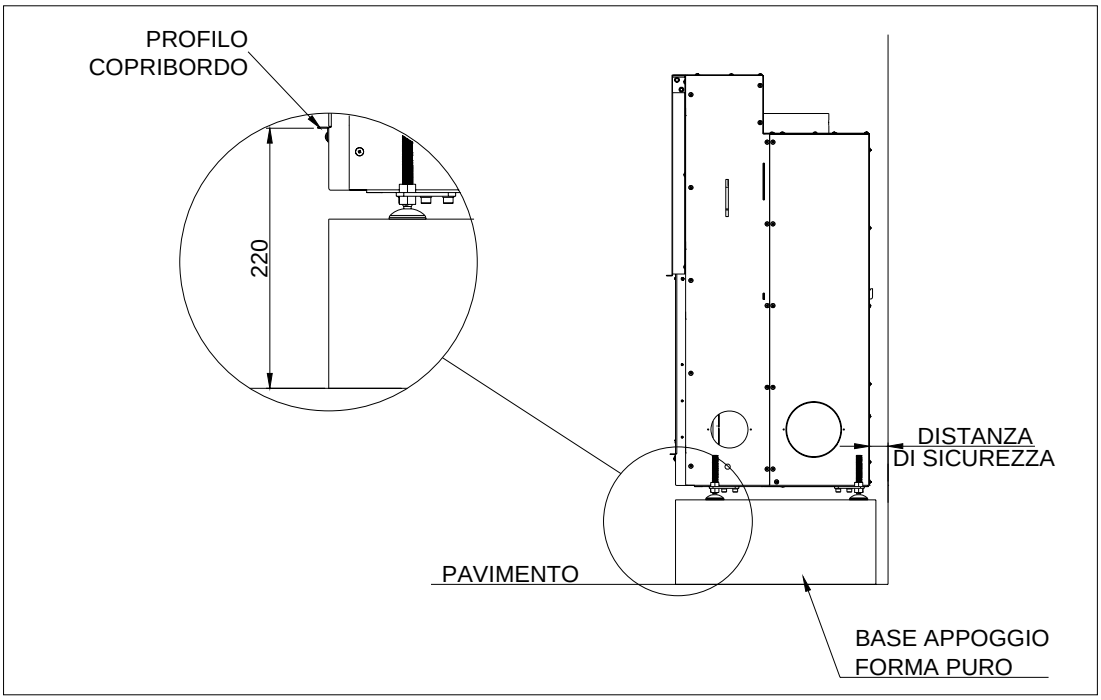

Technical service – all rights reserved by mcz spa
Reproduction prohibited

3.3. PHASE 2 – ASSEMBLY OF LOWER PROFILE AND SIDESRH/LH

Fasten the elements using 4 screws PH-AB 3.9X95. Make sure the sides are installed facing the right way, i.e. with the outlet at the top and facing inwards (towards the fireplace stove).

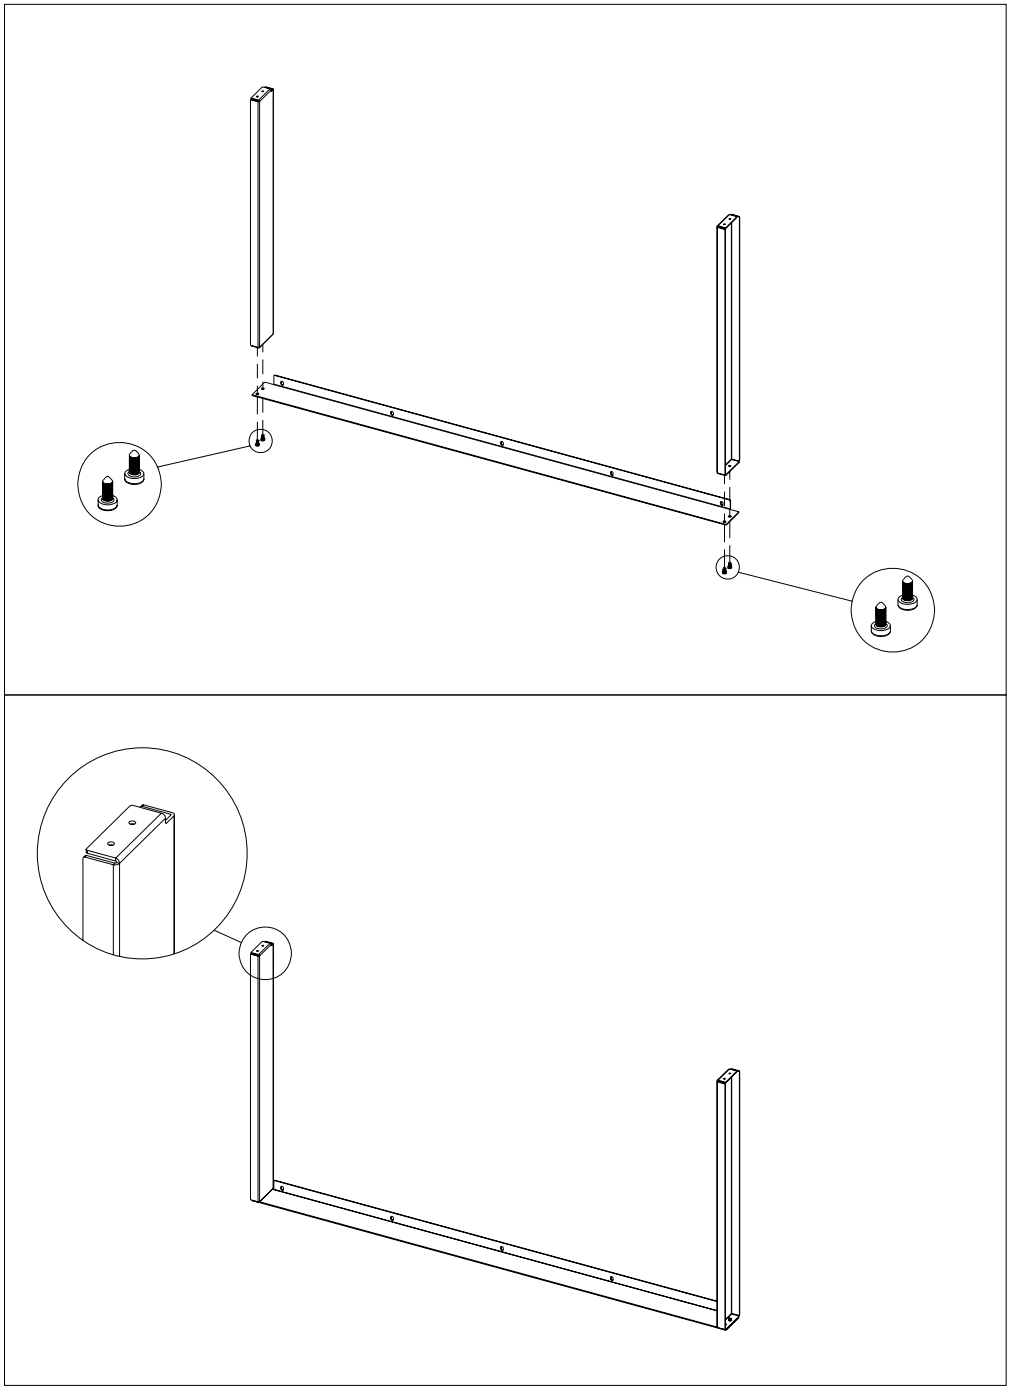

Move the three assembled elements near the unit so that the lower profile is positioned under the edge-cover profile of the Forma Puro95.

The slots of the lower profile must be aligned with those of the edge-cover profile Forma Puro95. Fasten the assembly to the unit using the same screws that support the profile of the fireplace stove.

Technical service – all rights reserved by mcz spa
Reproduction prohibited

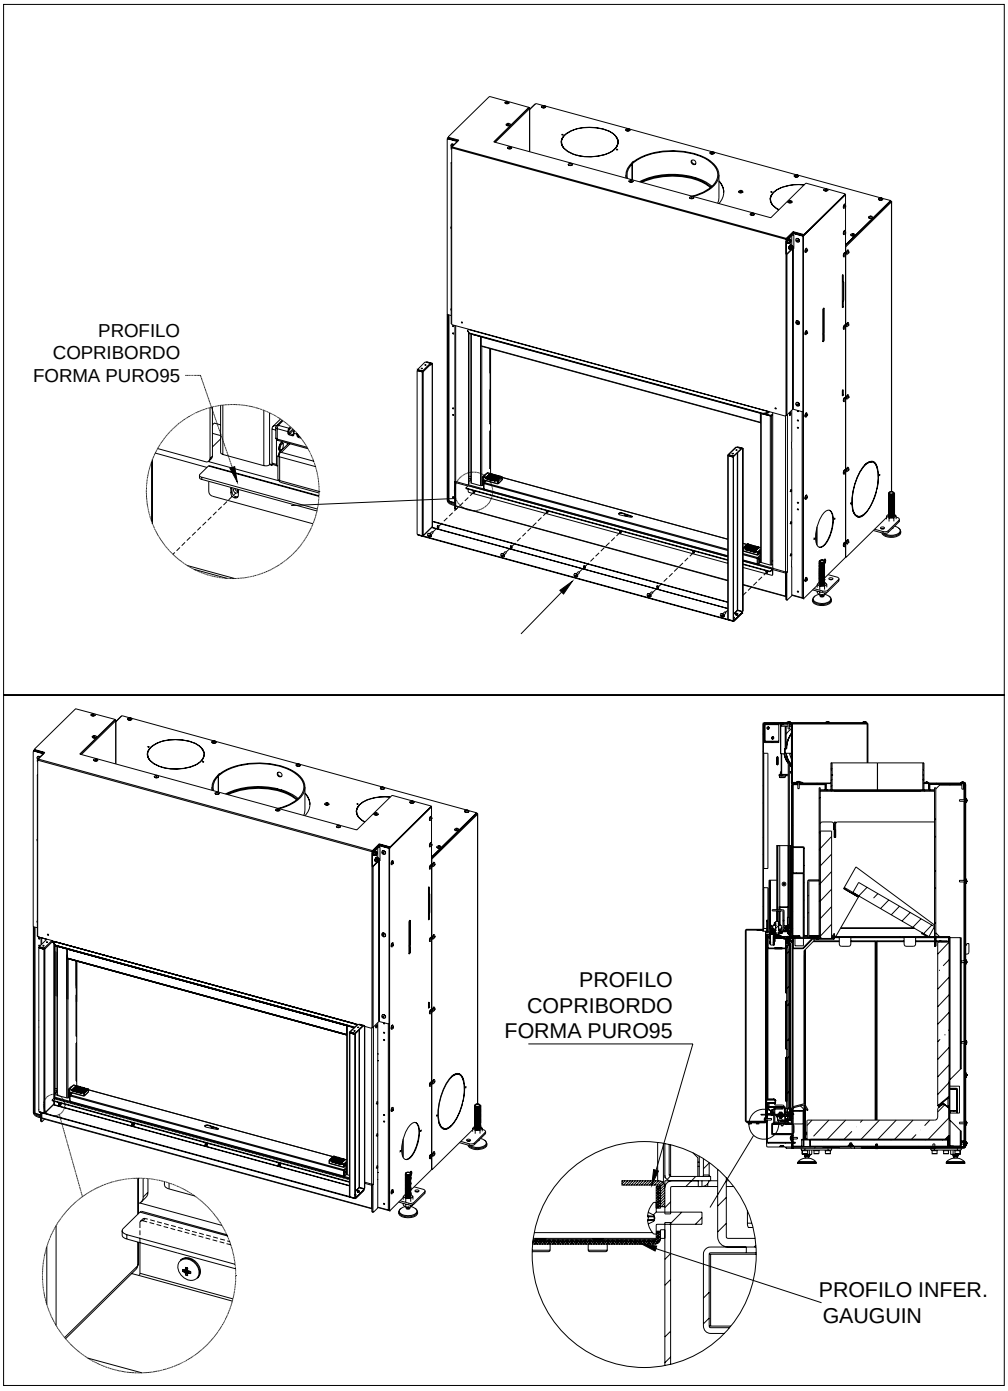

Technical service – all rights reserved by mcz spa
Reproduction prohibited

3.4. PHASE 3 – INSTALLATION OF UPPER PROFILE

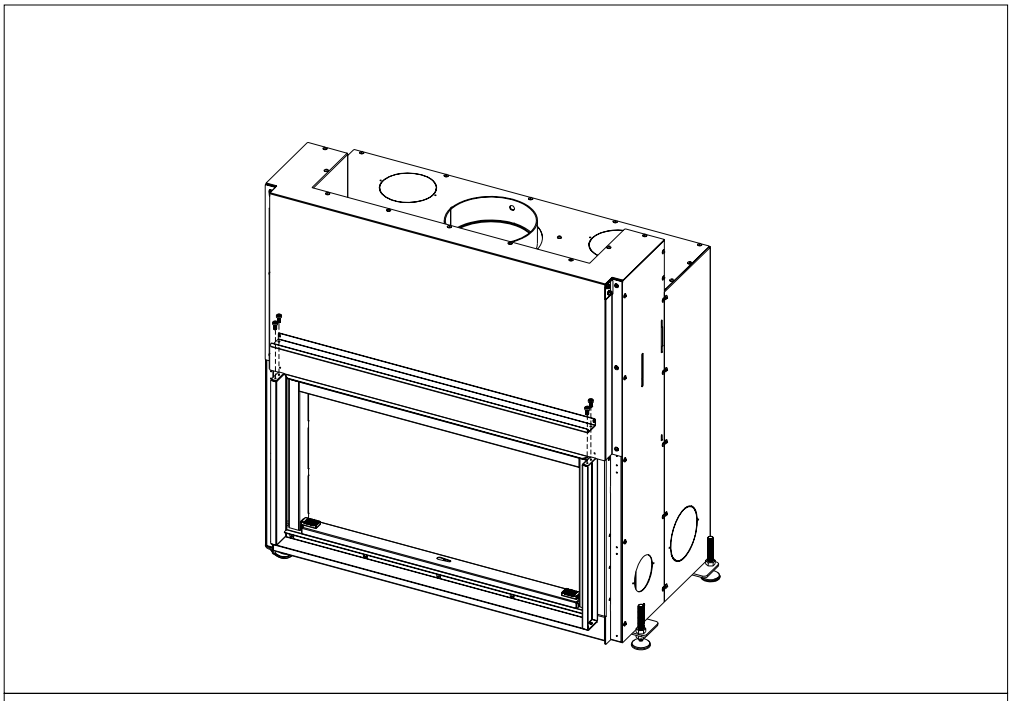

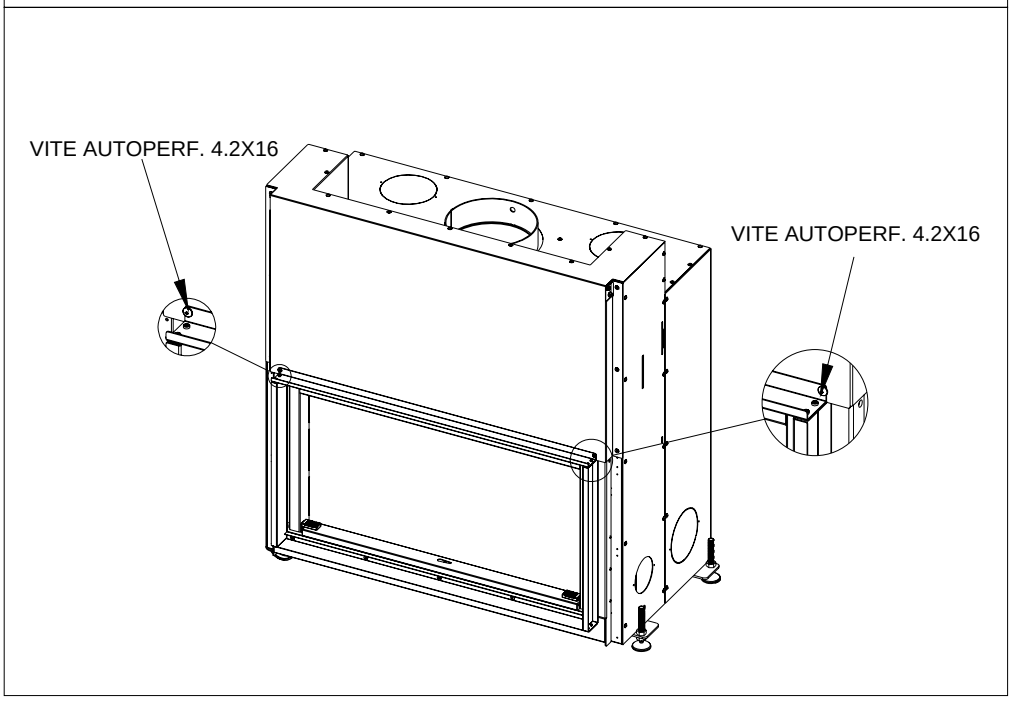

Fasten the upper element (4) to the right/left sides using 4 screws PH-AB 3.9X95 and to Forma Puro95 with 2 self-tapping screws. 4.2X16. When assembly is complete, the structure thus assembled must be rigid and firmly attached to the fireplace stove.

Technical service – all rights reserved by mcz spa
Reproduction prohibited

3.5. PHASE 3 – WALL FOR RECESSED INSTALLATION

Prepare the wall for recessed installation using fireproof material, such as fireproof plasterboard, and at least 3 steel uprights. For greater safety, you can use 6 uprights, inserted two by two). Provide an opening of 1060X570 mm, 160 mm from the floor (see drawing). The steel uprights must be placed vertically in the positions shown (see drawing).

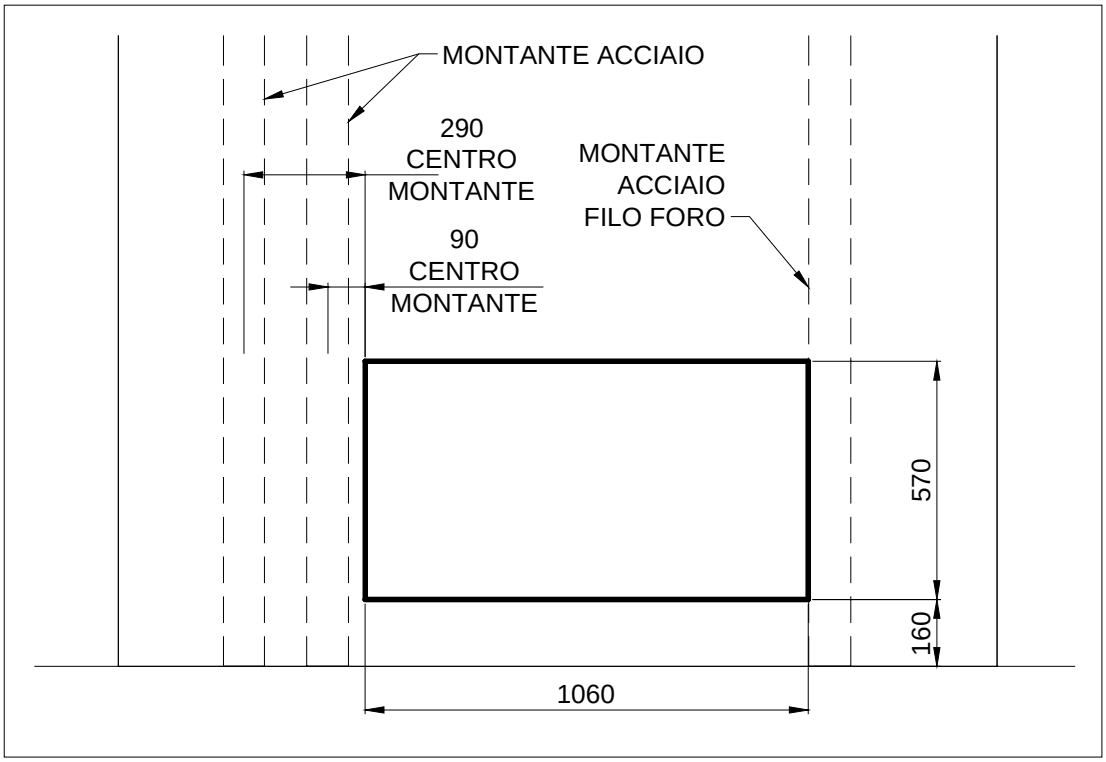

Technical service – all rights reserved by mcz spa
Reproduction prohibited

3.6. PHASE 4– ASSEMBLY OF SLATE FRAME WITH STAINLESS STEEL FIRE BOX

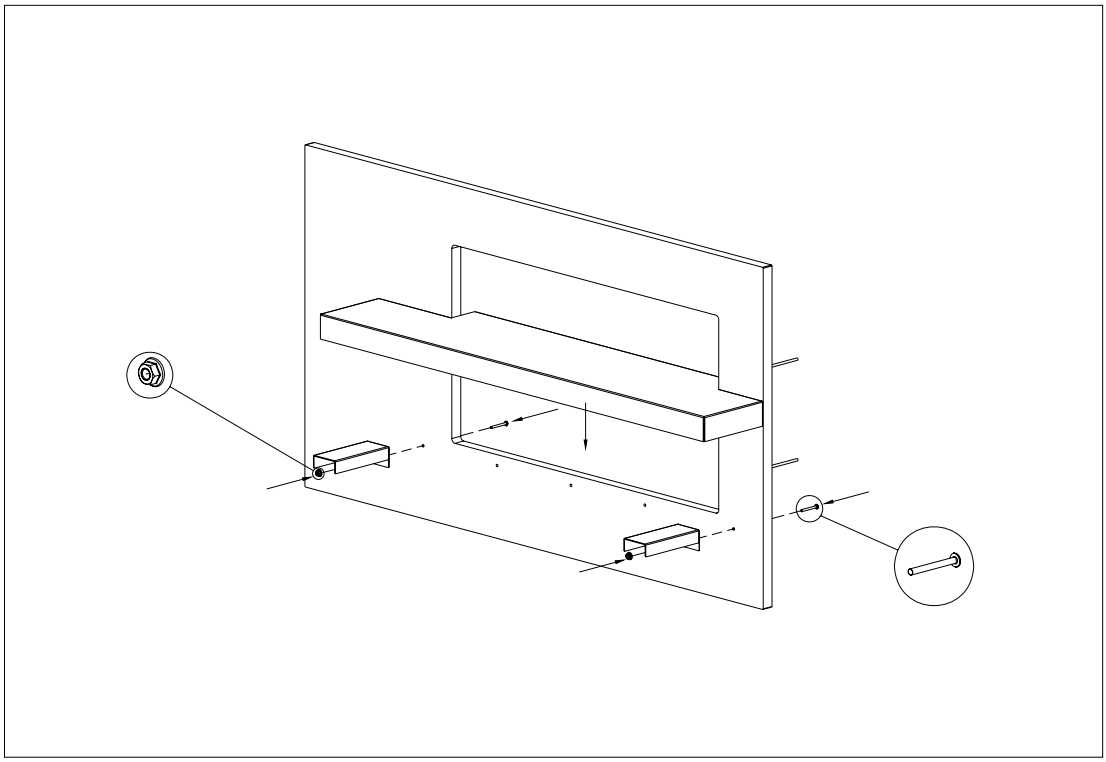

Insert the stainless steel fire box (6) in the slate frame (5), lowering it enough that the holes of the fire bed are concentric with those of the slate frame. Add two brackets (7), ensuring that the fire bed rests on the brackets. Fasten the three elements (slate frame, fire bed and bracket) using 2 screws M5X50 w/flange (which pass through from the back to the front side), secured with two flanged nuts FD M5.

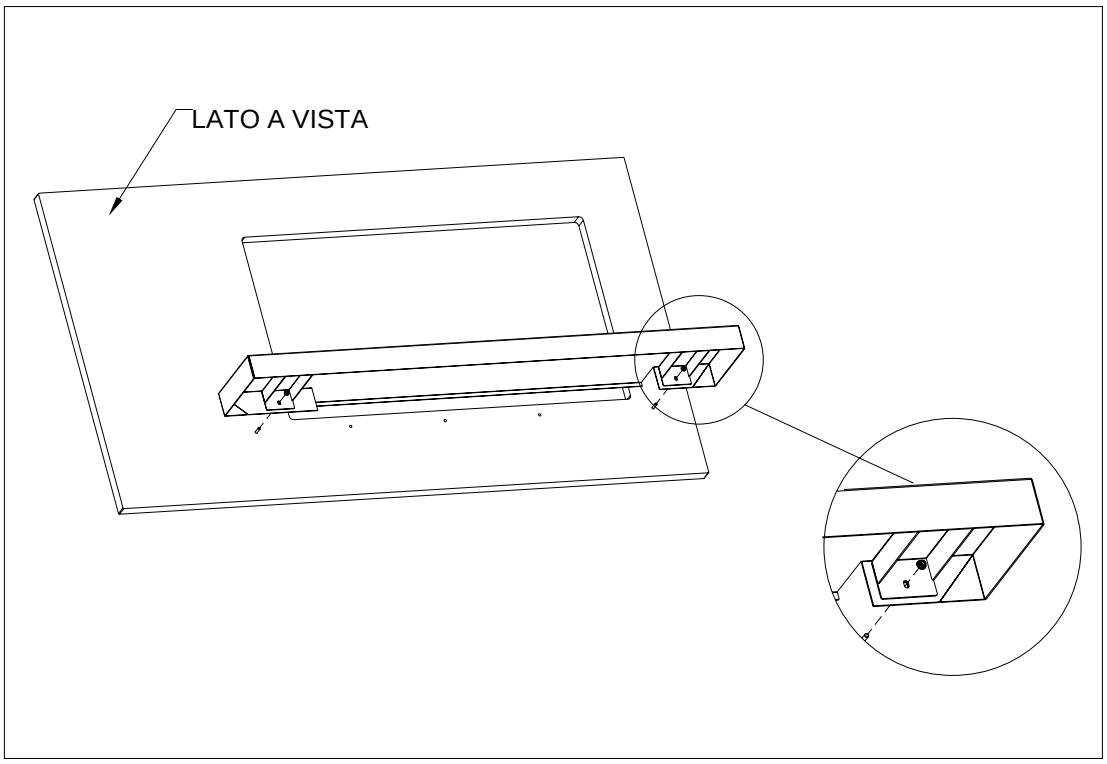

Technical service – all rights reserved by mcz spa
Reproduction prohibited

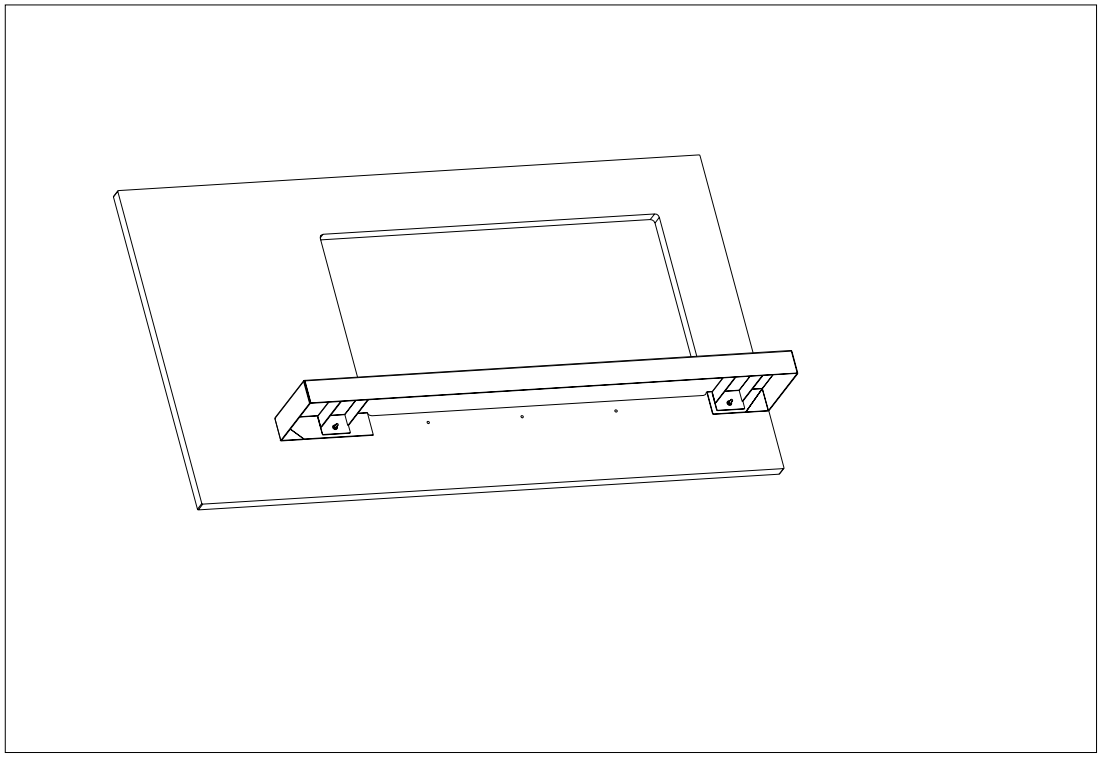

The right side of the fire bed must be flush with the right side of the frame, looking at the door of the Forma Puro 95 and sides towards the centre of the room.

Add the other brackets, also adherent to the fire bed, and fastened with screw M5 and flanged nut M5.

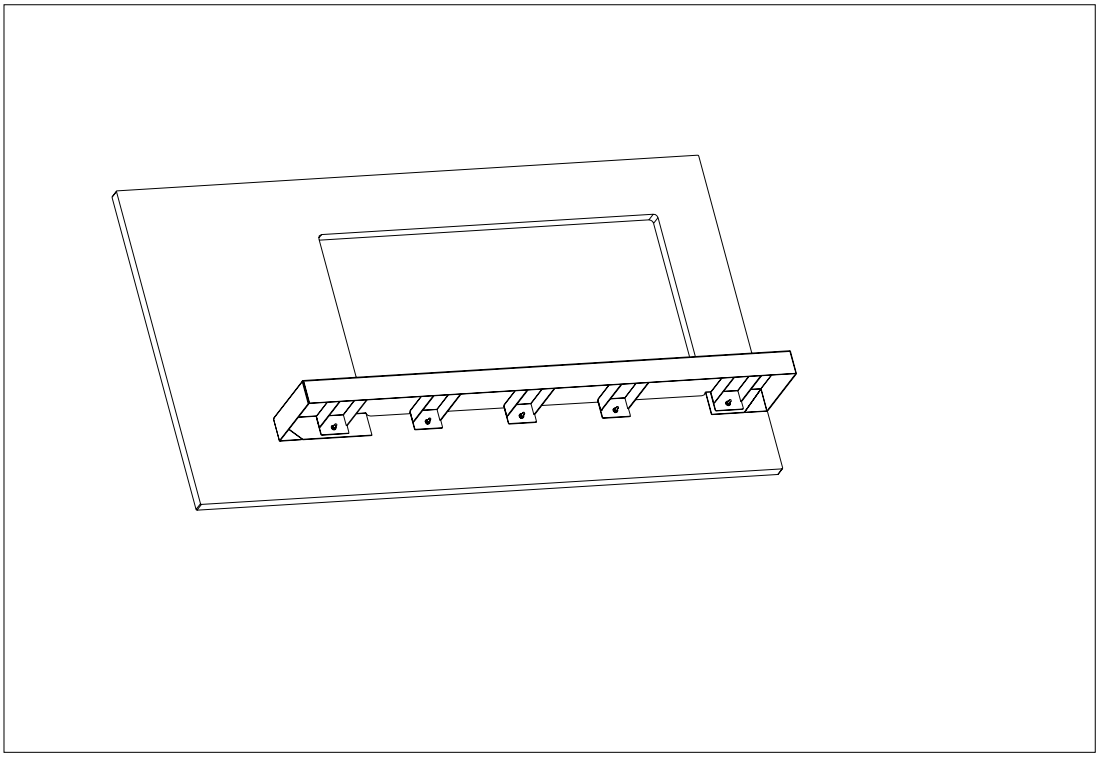

Technical service – all rights reserved by mcz spa
Reproduction prohibited

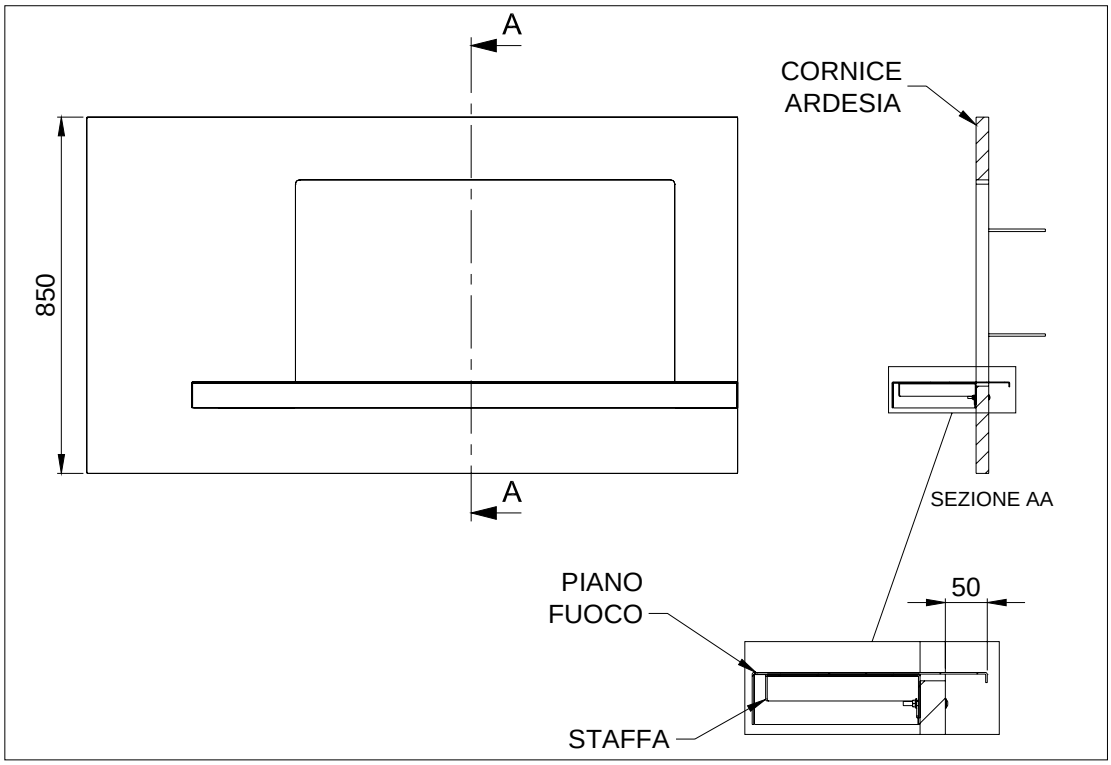

3.7. PHASE 5 – FINAL ASSEMBLY OF SLATE FRAME AND STAINLESS STEEL FIRE BED

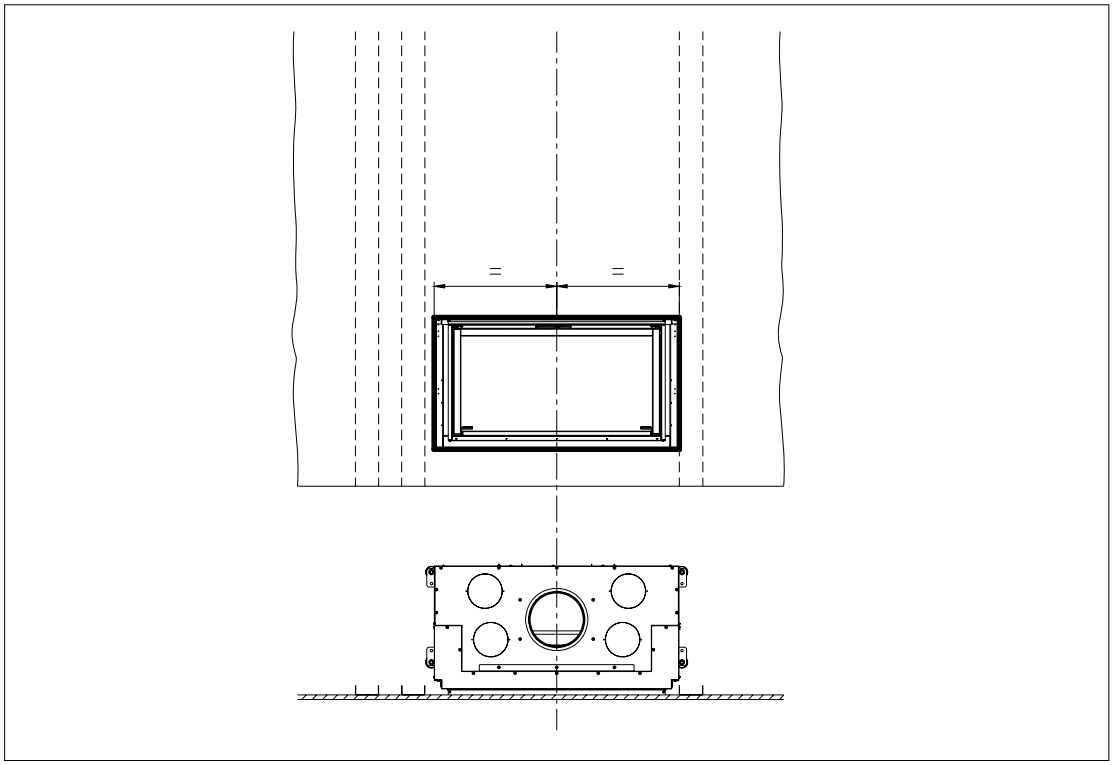

Technical service – all rights reserved by mcz spa
Reproduction prohibited

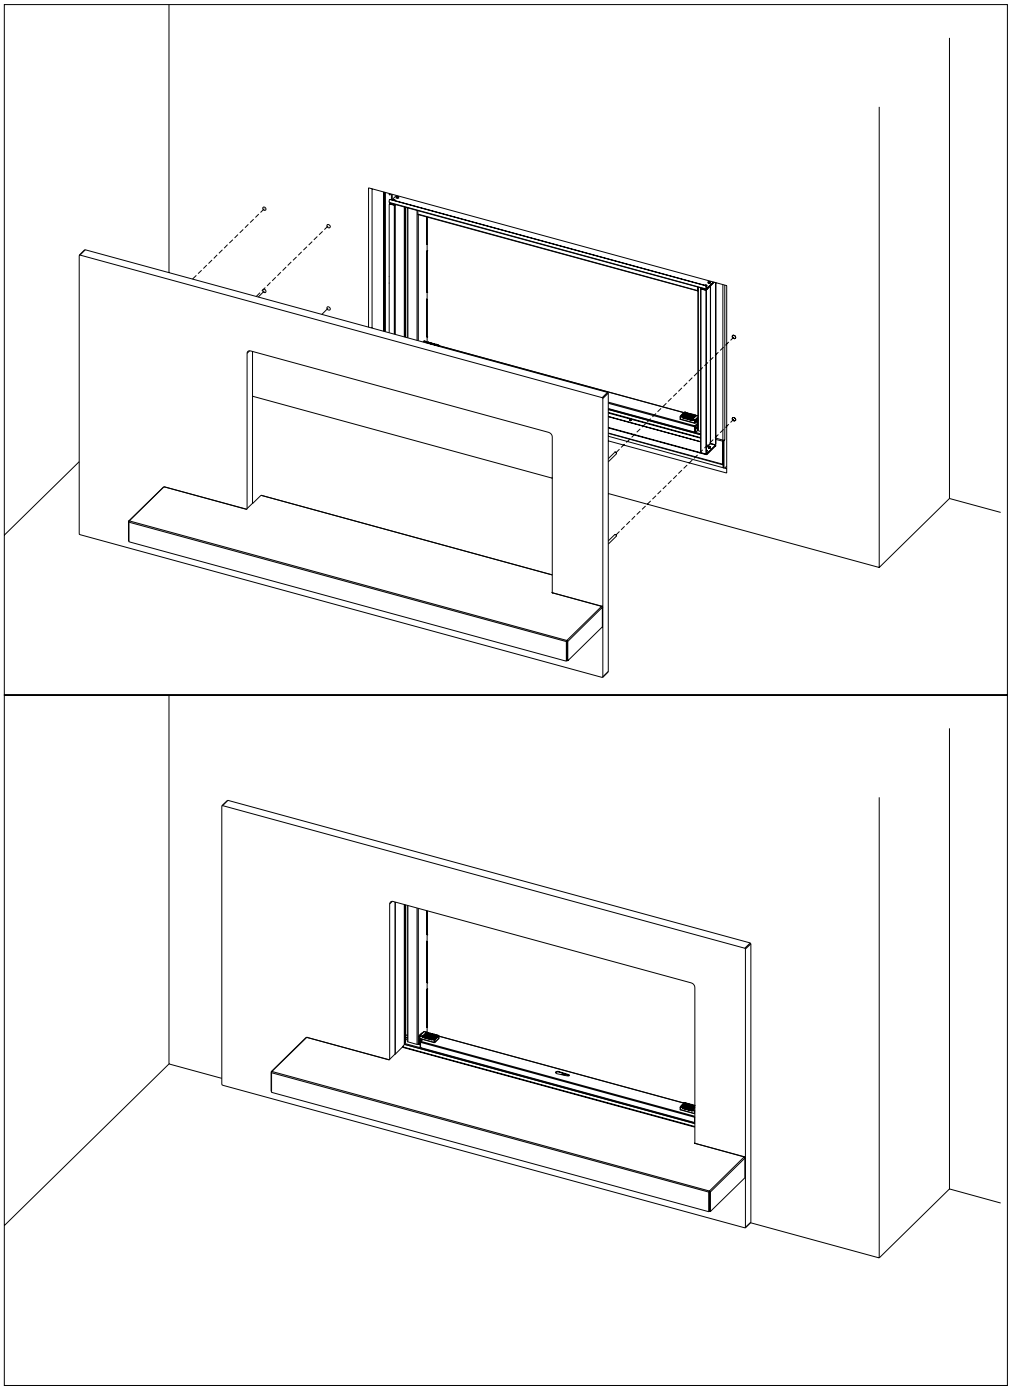

Move the assembled cladding near FormaPuro95. Perforate the wall for recessed insertion at the threaded bars on the rear side of the slate frame. Secure from the inside with the same number of flanged nuts M5.

Technical service – all rights reserved by mcz spa
Reproduction prohibited

3.8. TECHNICAL TERMS GLOSSARY OF THE PICTURES

PAGE 5	**PAGE 5**
DISTANZA DI SICUREZZA	SAFETY DISTANCE
PAGE 6	**PAGE 6**
COMPONENTE	COMPONENT
PROFILO INFERIORE	LOWER PROFILE
SPALLA SX	LH SIDE
SPALLA DX	RH SIDE
PROFILO SUPERIORE	UPPER PROFILE
CORNICE ARDESIA	SLATE FRAME
PIANO FUOCO	FIRE BED
STAFFA PIANO FUOCO	FIRE BED BRACKET
VITERIA IN DOTAZIONE	NUTS AND BOLTS PROVIDED
VITE PH-HB 3,5X9,5	SCREW PH-HB 3.5X9.5
VITE AUTOPERFORANTE PANEL 4,2X16	PANEL SELF-TAPPING SCREW 4.2X16
VITE M5X50 C/FLANGIA	SCREW M5X50 W/FLANGE
DADO FLANGIATO FD M5	FLANGED NUT FD M5
PAGE 7	**PAGE 7**
PROFILO COPRIBORDO	EDGE-COVER PROFILE
PAVIMENTO	FLOOR
DISTANZA DI SICUREZZA	SAFETY DISTANCE
BASE APPOGGIO FORMA PURO	SUPPORT BASE FORMA PURO
PAGE 9	**PAGE 9**
PROFILO COPRIBORDO FORMA PURO65	EDGE-COVER PROFILE FORMA PURO65
PROFILO INFERIORE GAUGUIN	GAUGUIN LOWER PROFILE
PAGE 10	**PAGE 10**
VITE AUTOPERFORANTE PANEL 4,2X16	PANEL SELF-TAPPING SCREW 4.2X16
PAGE 11	**PAGE 11**
MONTANTE ACCIAIO	STEEL UPRIGHT
CENTRO MONTANTE	UPRIGHT CENTRE
MONTANTE ACCIAIO FILO FORO	STEEL UPRIGHT FLUSH WITH HOLE
PAGE 13	**PAGE 13**
LATO A VISTA	VISIBLE SIDE

Technical service – all rights reserved by mcz spa
Reproduction prohibited

PAGE 14	PAGE 14
CORNICE ARDESIA	SLATE FRAME
PIANO FUOCO	FIRE BED
STAFFA	BRACKET
SEZIONE AA	SECTION A-A

Technical service – all rights reserved by mcz spa
Reproduction prohibited